


Non-Reversing, Four Pole Contactors With AC Coil, Series CA7 (Open type only)

I _e [A]		Ratings for Switching AC Motors (AC2 / AC3 / AC4)										Contact Configuration, Main Pole		Open Type			
		kW (50 Hz)				UL/CSA HP (60 Hz)											
		AC-3	AC-1	230V	400V 415V	500V	690V	1 Ø		3 Ø							
115V	230V							200V	230V	460V	575V	NO	NC				
9	32	3	4	4	4	1/2	1 1/2	2	2	5	7-1/2	4	0	CA7-9-M40-*	118.16		
												3	1	CA7-9-M31-*	133.71		
												2	2	CA7-9-M22-*	133.71		
12	32	4	5.5	5.5	5.5	1/2	2	3	3	7-1/2	10	4	0	CA7-12-M40-*	152.36		
												3	1	CA7-12-M31-*	167.91		
												2	2	CA7-12-M22-*	167.91		
16	32	5.5	7.5	7.5	7.5	1	3	5	5	10	15	4	0	CA7-16-M40-*	171.02		
												3	1	CA7-16-M31-*	186.57		
												2	2	CA7-16-M22-*	186.57		
23	32	7.5	11	13	10	2	3	5	7-1/2	15	15	4	0	CA7-23-M40-*	191.75		
												3	1	CA7-23-M31-*	207.30		
												2	2	CA7-23-M22-*	207.30		
37	75	11	18.5	20	18.5	3	5	10	10	25	30	4	0	CA7-40-M40-*	382.48		
												2	2	CA7-40-M22-*	382.48		
85	130	25	45	55	45	7-1/2	15	25	30	60	50	4	0	CA7-90-M40-*	651.97		
												2	2	CA7-90-M22-*	651.97		

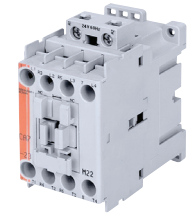


CA7-23-M22-120 contactor

Coil Codes ❶

AC Coil Code	Voltage Range	
	50 Hz	60 Hz
24Z	24V	24V
120	110V	120V
208	~	208V
220W	~	208V-240V
240	220V	240V
277	240V	277V
380	380V-400V	440V
480	440V	480V
600	550V	600V

Coil Terminal Position ❷

All CA7 contactors are stocked and delivered with the coil terminals located on the line side (top) of the contactor. This is the typical configuration when using the contactor with an overload relay. When the contactor is used with the KT7 Motor Circuit Controller, the coil must be reversed, so that the coil terminals are located at the load side (bottom) of the contactor. CA7 coils can easily be reversed in the field, however, they are also available for order with the coils reversed from the factory. Contact your Sprecher+Schuh representative for more information about ordering CA7 contactors with reversed coils.

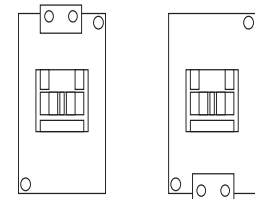

All CA7 contactors come with reversible coils.

Ordering Instructions

Specify Catalog Number	
Replace (*) with Coil Code	See Coil Codes on this page.

- ❶ Other voltages available, see page A56.
- ❷ For coil terminals on the load side (bottom) add a U in front of the coil code. For example: CA7-23-M40-120 becomes CA7-23-M40-U120.