

Series CATN7 208V AC with Fusible Disconnect (J-Type) ③④

NEMA Size	Max HP 3-Phase ①	Auxiliary Contacts per Contactor ②		Fuse Clip Amps	Type 1 Metallic General Purpose ⓧ	Price ⑥	DIM	Type 3R Metallic Outdoor Raintight	Price ⑥	DIM
		NO	NC							
00	0.25	2	1	30	CATN7-12-XA-D1BB-JF61G17-L11	1712	C	CATN7-12-XA-D1BB-JF61R17-L11	2189	0
	0.5	2	1	30	CATN7-12-XA-D1CB-JF61G17-L11	1712	C	CATN7-12-XA-D1CB-JF61R17-L11	2189	0
	0.75	2	1	30	CATN7-12-XA-D1CB-JF61G17-L11	1712	C	CATN7-12-XA-D1CB-JF61R17-L11	2189	0
	1	2	1	30	CATN7-12-XA-D1CB-JF61G17-L11	1712	C	CATN7-12-XA-D1CB-JF61R17-L11	2189	0
	1.5	2	1	30	CATN7-12-XA-D1DB-JF61G17-L11	1712	C	CATN7-12-XA-D1DB-JF61R17-L11	2189	0
0	2	2	1	30	CATN7-16-XA-D1DB-JF61G17-L11	1755	C	CATN7-16-XA-D1DB-JF61R17-L11	2232	0
	3	2	1	30	CATN7-16-XA-D1DB-JF61G17-L11	1755	C	CATN7-16-XA-D1DB-JF61R17-L11	2232	0
1	5	2	1	30	CATN7-37-XA-D1ED-JF61G17-L11	1968	C	CATN7-37-XA-D1ED-JF61R17-L11	2445	0
	7.5	2	1	60	CATN7-37-XA-D1ED-JF62G17-L11	2053	C	CATN7-37-XA-D1ED-JF62R17-L11	2529	0
2	10	2	1	60	CATN7-43-XA-D1FD-JF62G17-L11	2095	C	CATN7-43-XA-D1FD-JF62R17-L11	2572	0
3	15	2	1	100	CATN7-85-XA-EGE-JF63G17-L11	2835	D3	CATN7-85-XA-EGE-JF63R17-L11	3567	0
	20	2	1	100	CATN7-85-XA-EGE-JF63G17-L11	2835	D3	CATN7-85-XA-EGE-JF63R17-L11	3567	0
	25	2	1	200	CATN7-85-XA-EGE-JF64G17-L11	3602	G	CATN7-85-XA-EGE-JF64R17-L11	4334	T

- Full Voltage Non-Reversing (FVNR) Features include:**
- NEMA-sized CAN7 contactor
 - Three-Phase CEP7 Electronic Overload Relay
 - Control Circuit Transformer
 - Hand-Off-Auto (H-O-A) selector switch
 - Red Run pilot light
 - 2-NO and 1-NC auxiliaries for customer use
 - Class CC Fuse holder as fused primary of CCT
 - UL98 fusible L11 disconnect
 - Reset pushbutton

NEMA Combination Starters

Series CATN7 230V AC with Fusible Disconnect (J-Type) ③④

NEMA Size	Max HP 3-Phase ①	Auxiliary Contacts per Contactor ②		Fuse Clip Amps	Type 1 Metallic General Purpose ⓧ	Price ⑥	DIM	Type 3R Metallic Outdoor Raintight	Price ⑥	DIM
		NO	NC							
00	0.25	2	1	30	CATN7-12-XB-D1BB-JF61G17-L11	1712	C	CATN7-12-XB-D1BB-JF61R17-L11	2189	0
	0.5	2	1	30	CATN7-12-XB-D1CB-JF61G17-L11	1712	C	CATN7-12-XB-D1CB-JF61R17-L11	2189	0
	0.75	2	1	30	CATN7-12-XB-D1CB-JF61G17-L11	1712	C	CATN7-12-XB-D1CB-JF61R17-L11	2189	0
	1	2	1	30	CATN7-12-XB-D1CB-JF61G17-L11	1712	C	CATN7-12-XB-D1CB-JF61R17-L11	2189	0
	1.5	2	1	30	CATN7-12-XB-D1CB-JF61G17-L11	1712	C	CATN7-12-XB-D1CB-JF61R17-L11	2189	0
0	2	2	1	30	CATN7-16-XB-D1DB-JF61G17-L11	1755	C	CATN7-16-XB-D1DB-JF61R17-L11	2232	0
	3	2	1	30	CATN7-16-XB-D1DB-JF61G17-L11	1755	C	CATN7-16-XB-D1DB-JF61R17-L11	2232	0
1	5	2	1	30	CATN7-37-XB-D1ED-JF61G17-L11	1968	C	CATN7-37-XB-D1ED-JF61R17-L11	2445	0
	7.5	2	1	60	CATN7-37-XB-D1ED-JF62G17-L11	2053	C	CATN7-37-XB-D1ED-JF62R17-L11	2529	0
2	10	2	1	60	CATN7-43-XB-D1FD-JF62G17-L11	2095	C	CATN7-43-XB-D1FD-JF62R17-L11	2572	0
	15	2	1	100	CATN7-43-XB-D1FD-JF63G17-L11	2520	C	CATN7-43-XB-D1FD-JF63R17-L11	3216	0
3	20	2	1	100	CATN7-85-XB-EGE-JF63G17-L11	2835	D3	CATN7-85-XB-EGE-JF63R17-L11	3567	0
	25	2	1	100	CATN7-85-XB-EGE-JF63G17-L11	2835	D3	CATN7-85-XB-EGE-JF63R17-L11	3567	0
	30	2	1	200	CATN7-85-XB-EGE-JF64G17-L11	3602	G	CATN7-85-XB-EGE-JF64R17-L11	4334	T

- Full Voltage Non-Reversing (FVNR) Features include:**
- NEMA-sized CAN7 contactor
 - Three-Phase CEP7 Electronic Overload Relay
 - Control Circuit Transformer
 - Hand-Off-Auto (H-O-A) selector switch
 - Red Run pilot light
 - 2-NO and 1-NC auxiliaries for customer use
 - Class CC Fuse holder as fused primary of CCT
 - UL98 fusible L11 disconnect
 - Reset pushbutton

- ① HP and NEMA size selection shown for 208V ratings only. Contact your Sprecher + Schuh representative for other voltage application.
- ② Contactors are equipped with number and type of auxiliaries indicated. See page C108 to order additional or different auxiliary contacts.
- ③ Fusible combo starter uses the L11 Disconnect. Fuse clips accept "J" type fuses. Power fuses not supplied.

- ④ A Red and Yellow Handle may be selected instead of the standard Black handle. Change "JF" to "LF" in catalog number.
- ⑤ HP and NEMA size selection shown for 230V ratings only. Contact your Sprecher + Schuh representative for other voltage application.
- ⑥ Dimensional information starts on page C122.

